

C180 x motor & auto focus cable changing process

1. Dismount two screw on the bottom of side panel (see red arrows below)



2. Dismount two screws of right-front cover(M3 *2)



C180 x motor & auto focus cable changing process

3. Dismount 4 screws of back cover(M3 *4)




4. Dismount right window cylinder




C180 x motor & auto focus cable changing process

5. Dismount 4 screws of right top cover (where the control panel locates)

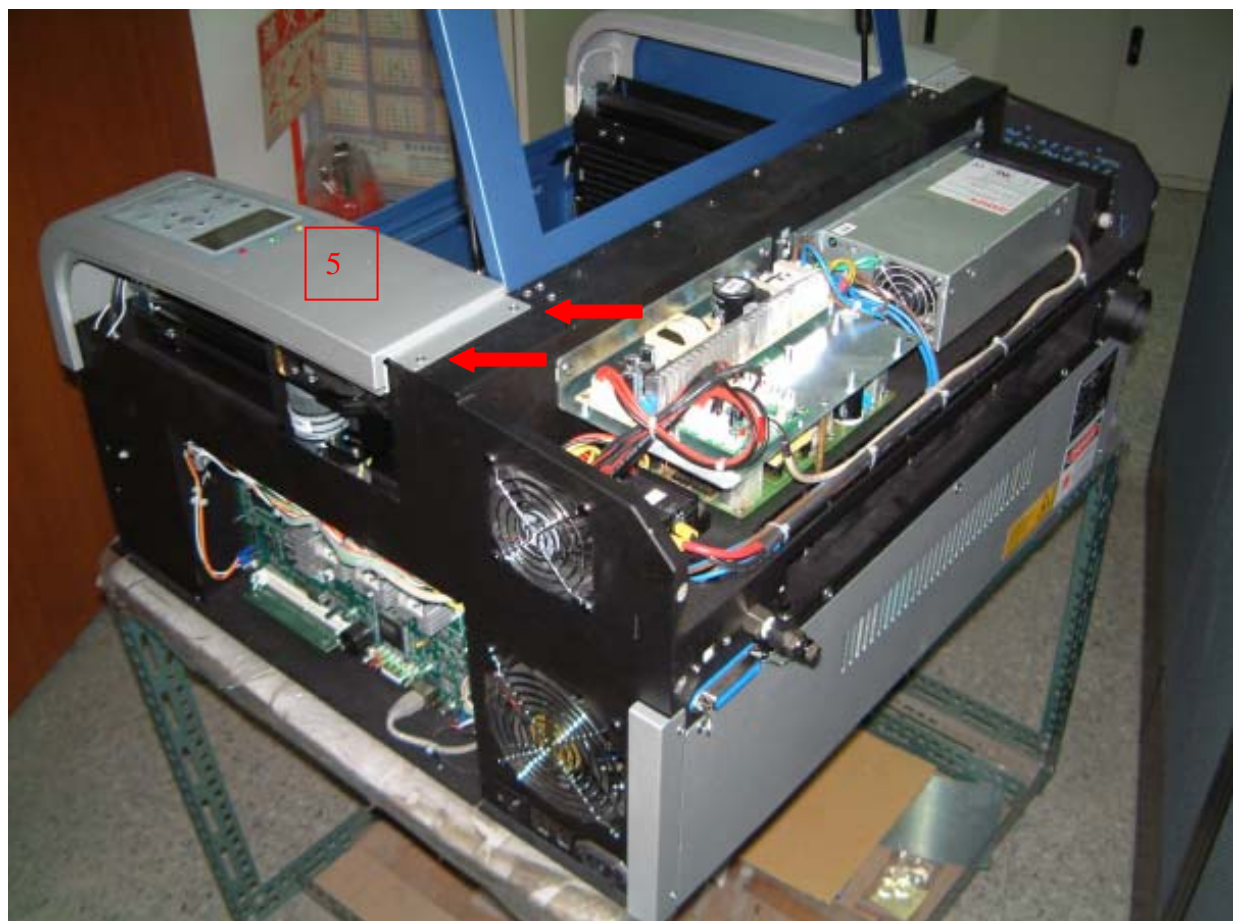


C180 x motor & auto focus cable changing process

6. Hanging the right top cover to the right side.

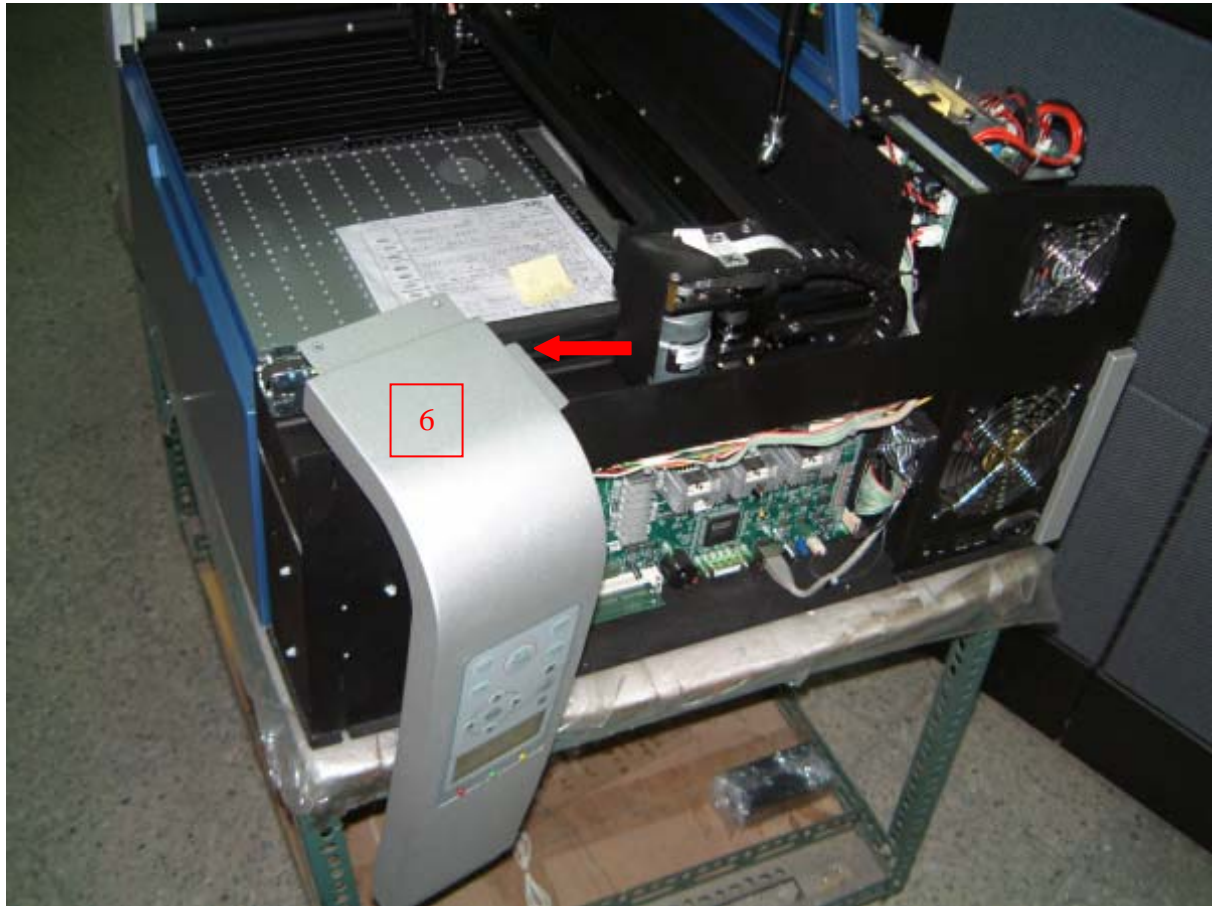


7. Dismount 4 screws of x motor cover(M3 *4)

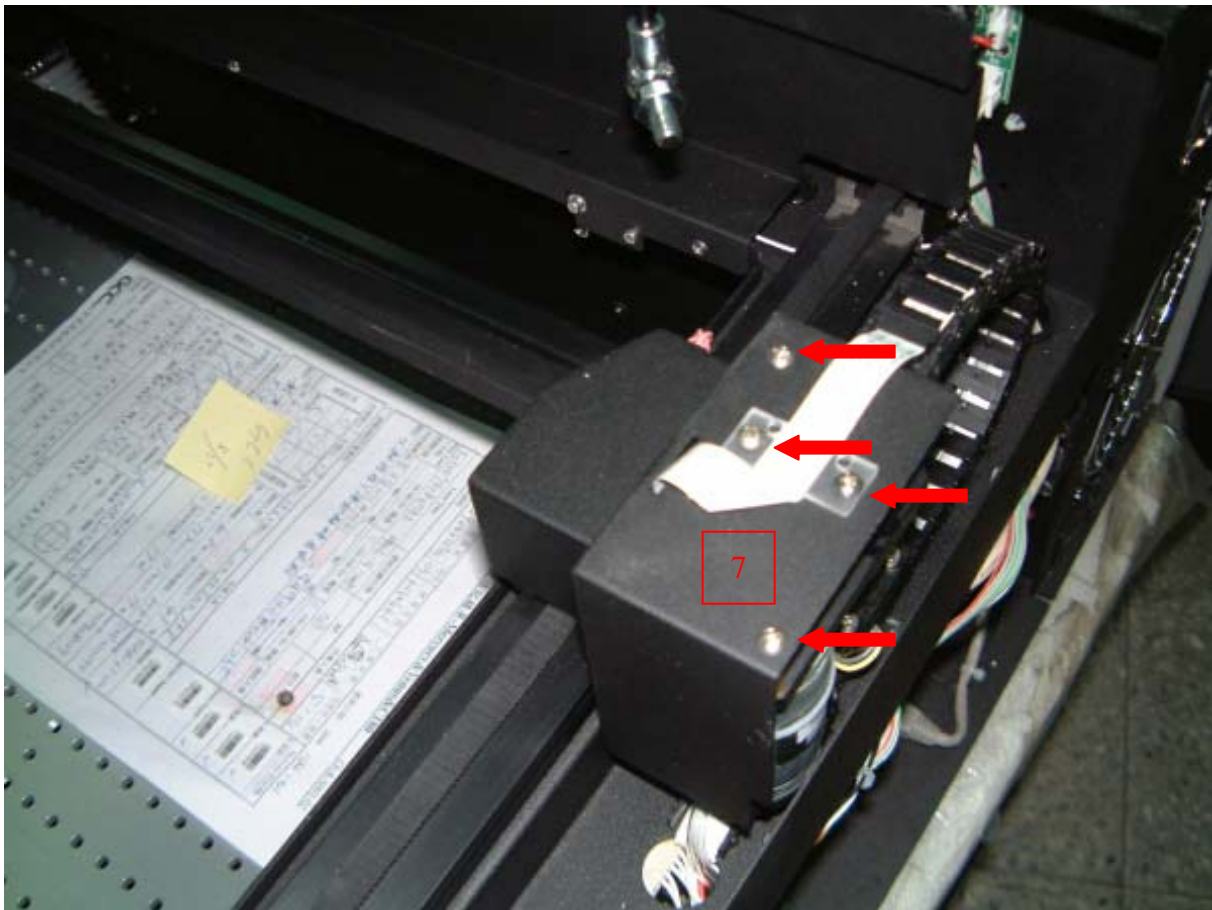

C180 x motor & auto focus cable changing process


7-1. Dismount 4 screws of x motor(M4 *4, red arrow below:) and the x motor cable be removed and changed.

8, For changing auto focus cable, first remove the auto focus cable from x motor pcb (see red circle below).

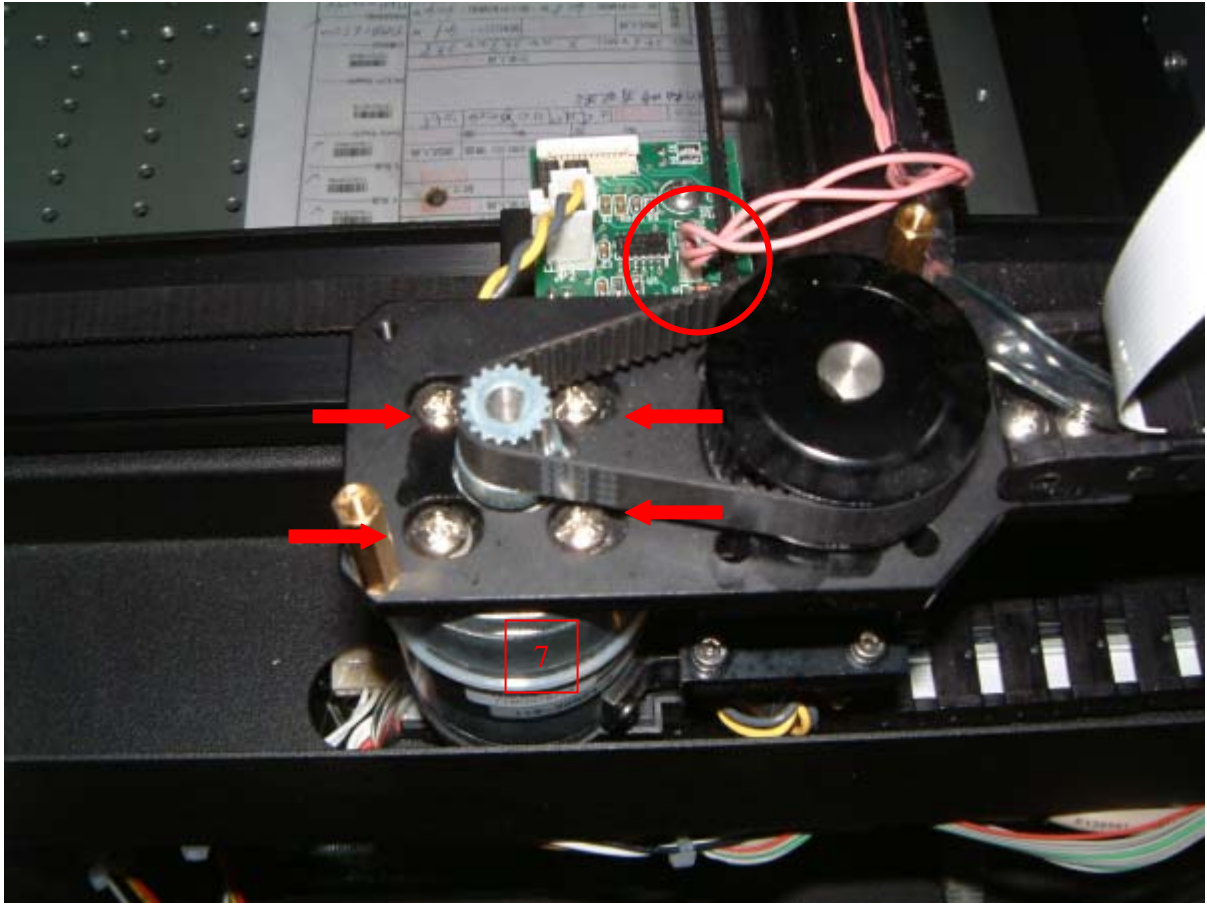

8-1, On lens carriage side, remove the auto focus cable also (it is tight, so use tweezers will be helpful).

C180 x motor & auto focus cable changing process

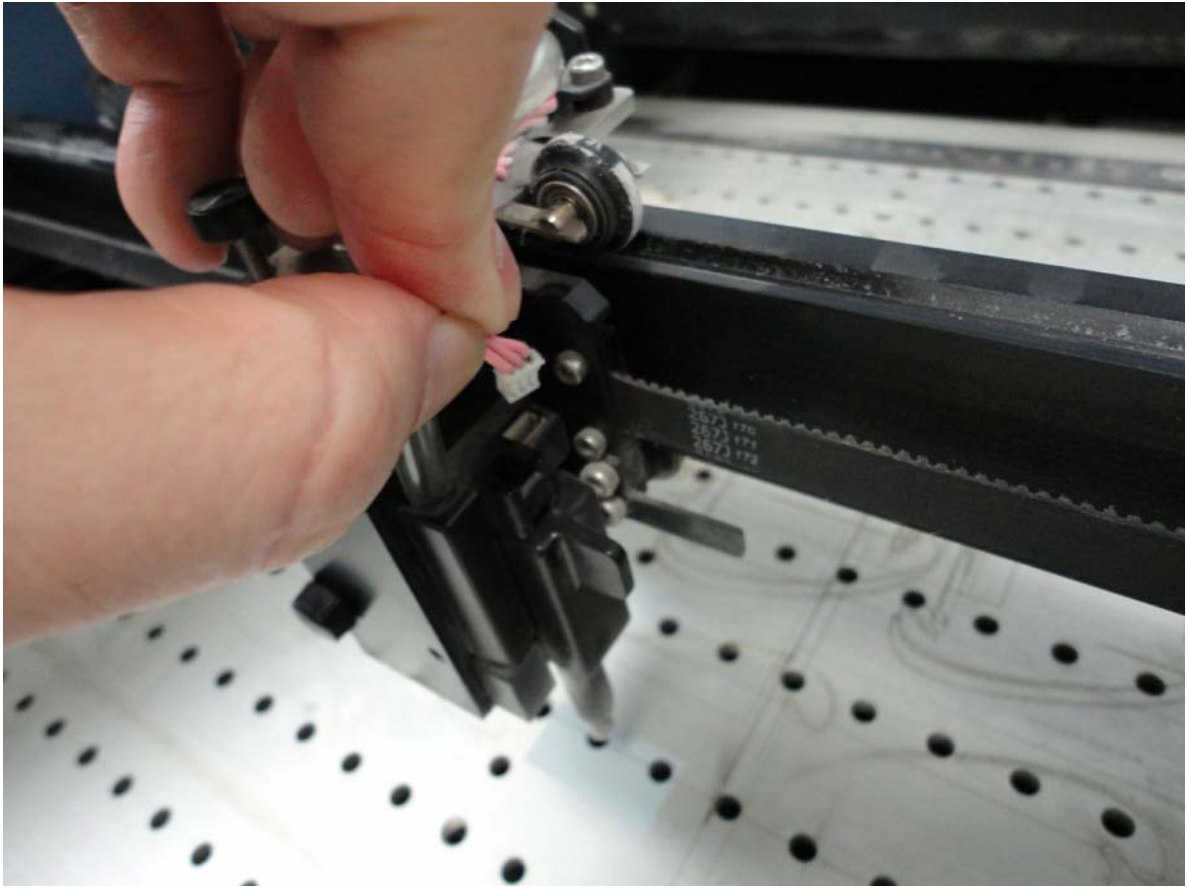

Pull out some joint will be easier to change auto focus cable.

